

MANUAL PROGRAMMING INSTRUCTIONS

929 PAGER 2/4 LINE ZOOM

Programming Functions:

Addresses (6)

Frequency (450 – 458 Mhz)

Baud Rate(512, 1200 and 2400)

Password

Contrast



1. Remove battery from pager.
2. Insert battery while holding down button [1].
3. When password appears, [0000] default password, press button [3].
4. The Frequency will appear, to change frequency press button [1], to move from one digit to another press button [2]. When frequency is correct press button [3]. The first cap code will appear.
5. Use button [2] to move from digit to digit. Use button [1] to change digit. Use button [3] to move to the next cap code.
6. Baud Rate -512, 1200, 2400. To change baud rate press button [2].
7. Press button [3] when done.
8. pager will beep and show **PASS**.

Special Features:

1. Display page directly on screen when received.
2. Back Light on when page received.
3. Delete Page with one (1) button.
4. Turn Pager off with one (1) button.

Receiving a Page

1. When a message is receive it will appear directly on the pager and the back light Will light.

Delete Page with one button (read button)

1. Page displayed when received.
2. After reading the message, Press the **RD** button for 2 seconds, the word **DELETE?** will appear. Release button and Press the **RD** button again and the message will be deleted.

Turn Off Pager with one button (read button)

1. When all messages are deleted, press and hold the RD button for 2 seconds.
2. The words **PAGER OFF?** will appear. Press the RD button again and the pager will turn off.