



---

# RX10

## Ten Zone Receiver Decoder

---



# User Manual

---

Scope Communications UK Ltd  
Quantum House, Totnes, Devon TQ9 5AL England.  
Tel: 01803 860700 Email: [sales@scope-uk.com](mailto:sales@scope-uk.com)

# RX10 Ten Zone Receiver Decoder

## PREFACE

### ***Important Installation Information***

It is the purchasers' responsibility to determine the suitability of this equipment and its derivatives for any given application, Scope cannot give specific advice in this manual, as each use will require independent evaluation.

Scope has, wherever possible, employed extra safeguards to monitor the system's performance. Certain system installations, operational requirements or budgets may, however, limit the effectiveness of these safeguards. Again, the suitability of the system for any given application must therefore be decided by the installer and their customer, relative to the application and risk.

Good working practice dictates that a suitable system installation log must be generated, together with a record of the dates when the system has been manually checked, (with the aid of signal strength meters etc.) enabling the system performance to be compared with the original installation data.

For UK equipment, Scope has no control of the use and application of the frequencies issued by OFCOM. Some equipment that is licensed may have greater protection than other equipment which is operated on a WT Act License Exempt basis.

The supply of this equipment is governed by our standard terms and conditions of sale, which can be found on the reverse of all order acknowledgements\*, proforma invoices\*, delivery notes, price lists and invoices. Alternatively, these can be provided on request.

\* Faxed proforma invoices and quotations refer to "conditions available upon request".

### ***Important Safety Information***

Scope products are designed to operate safely when installed and used according to general safety practices. The following requirements should be observed at all times.

#### **Do NOT subject this equipment to:**

- Mechanical shock
- Excessive humidity or moisture
- Extremes of temperature
- Corrosive liquids

This equipment is designed for indoor use, unless expressly stated otherwise, and must not be used in classified Hazardous Areas, including areas containing explosive or flammable vapours, unless express authorisation has been given in writing by the manufacturer. If in doubt, consult your local product dealer for further information.

Do not obstruct any slots or openings in the product. These are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.

## RX10 Ten Zone Receiver Decoder

Only use a damp cloth for cleaning (not liquid or aerosol based cleaners), and ensure that any power is removed from the unit prior to beginning the cleaning operation.

Removal of covers from the equipment must only be undertaken by authorised service personnel, who must ensure that power is isolated prior to removal.

### ***Installation***

Installation must only be undertaken by an Approved contractor, who shall ensure that all work is carried out in compliance with National Wiring Regulations. For mains powered equipment, a readily accessible isolating fuse or switched socket must be located within 1 metre of the equipment.

### ***No User Serviceable Parts***

Alteration or modification to any part of this equipment, without the prior written consent of the manufacturer, will invalidate all Approvals and Warranties attaching to the equipment. Further liability for the operation of the equipment, under the applicable law, will pass to the user, who will absolve the manufacturer of any further responsibility for it's correct operation and use.

### ***Liability***

Scope does not accept liability for any damage or injury, howsoever caused as the result of misuse of this equipment. It is the responsibility of the user to ensure that the equipment is operated in the manner for which it was intended and that it is the correct item of equipment for the required task.

### ***Warranty***

This product is warranted as free from defects of workmanship and materials for a period of one year from the original purchase date. During this time, if there is a defect or malfunction of this product, Scope will, with proof of purchase, repair or replace at it's discretion any defective parts, free of charge. This does not include where the adjustments, parts and repair are necessary due to circumstances beyond the control of Scope, including but not limited to fire or other casualty, accident, neglect, abuse, abnormal use or battery leakage damage.

#### **WARNING ! No User Serviceable Parts**

#### **Celui-ci ne contient aucune piece pouvant etre reparee par l'utilisateur**

Alteration or modification to any part of this equipment, without the prior written consent of the manufacturer, will invalidate all manufacturer approvals and warranties. No adjustments can be undertaken except by qualified and licensed persons as authorised by Scope.

This product complies with the essential requirements of the R&TTE Directive 1999/5/EC

Copies of the Declaration of Conformity covering this product can be obtained from Scope at: Quantum House, Steamer Quay, Totnes TQ9 5AL United Kingdom.

© Scope Communications UK Ltd, 2005 All Rights Reserved

## RX10 Ten Zone Receiver Decoder

### Overview

The RX10 is a POCESAG receiver decoder equipped with 10 individually switchable relays, a Common relay and an RS232 serial port.

A full function PC programming utility allows each relay to be configured to respond to a transmitted RIC (receiver identity code) or a range of RIC's. This will allow the user to independently energise (Close), de-energise (Open) or alternate (Toggle) the state of each relay by transmitting specified RIC's or ranges of RIC's\*.

Additionally, the user can Close or Toggle each relay for a defined time period (1-255 seconds). Sending repeat transmissions during the set time period will reset the timer, which allows a relay to be used as an "in service" monitor, i.e. so long as the unit keeps seeing the repeat transmissions within the set time period, the relay will remain latched. If a transmission fails to be received within the set window, the relay will drop out at the end of the set time period.

All relays have N/O, N/C and Common connections available on screw terminal blocks located on the main circuit board (see diagram 1). The maximum contact rating of each relay is 0.5A @ 125V ac, 1A @ 60V dc.

A Common relay will latch when any of the 10 zone relays is triggered. This can also be programmed to activate an internal sounder.

The unit can be reset by using either the key operated switch on the front of the RX10, or by transmitting a programmed RIC. This will de-energise all relays and return the system to its initial power up state.

An RS232 serial port provides a data logging or repeater function. This can be programmed to send transmitted messages to the serial port when either two individual RIC's are specified, or when a range of RIC's is specified. Additionally, the unit can be configured to send Scope protocol for onward transmission (using a Scope transmitter on a different frequency).

Front panel LED's indicate when each relay is energised and a flashing LED advises when transmitted data is received. A cool blue power LED completes the picture.

Power input requirement is 12V dc @ 0.7A, via the blue latching connector provided.

\* Each RIC must be a seven digit number in the range 0000008-2097151, excluding ranges 2007664-2007671 and 2045056-2045063.

# RX10 Ten Zone Receiver Decoder

## Section 1: Installation

Certain precautions in siting of the unit apply. As with all radio equipment, attention must be given to the aerial selected and where the unit is mounted in relation to the transmitter being monitored. If the unit is to be used with a second transmitter, it should be sited as centrally as possible within the secondary area to be covered, although it must of course, be within adequate distance of the originating transmitter.

It is therefore essential that adequate signal reception is checked before fitting the unit in the desired location. Using a Yaesu VR-120D Communications Receiver\* programmed to the required frequency, a signal strength of 5 or greater is deemed to be sufficient to provide a reliable consistent link. Readings below this level may lead to poor reception in adverse atmospheric conditions.

Ranges of up to 1 mile can be achieved quite easily except where the conditions are such that signal paths are severely obstructed due to reflections or physical obstacles placed in the way. Such conditions may be experienced where there are a large number of metallic structures around the site, or where the receiver is sited in a hollow, i.e. below the level of the transmitter or it's aerial.

[\*available from Scope, contact our sales dept. for full details]

To mount the unit on the wall, remove the two screws from the front of the case and separate the cover from the baseplate, taking care not to stress the ribbon cable which connects the front panel indicators to the main circuit board, as well as the cables which connect the Reset switch to the main board.

For ease of installation, the ribbon cable can be removed from the main board by lifting the collar either side of the connector (see diagram 1). This will release the locking mechanism and the cable can be withdrawn. The Reset lead can be unplugged from CN7 on the main board.

The RX10 baseplate should be fixed to an even wall surface using suitable screws fitted through the 4.75 mm holes provided in the chassis plate. Hold the chassis up to the chosen location and with the aid of a pencil mark the position of the mounting holes.

**Warning:** Do not use the chassis plate as a template for drilling the holes into the wall. Hammer drills vibrating through the chassis may irreparably damage the quartz crystals on the printed circuit boards.

Place the baseplate over the mounting holes and fit the fixing screws. Check that the chassis plate does not bend and that the screws do not snag or pinch any internal cables.

Connect the antenna to the unit via the BNC connector located at the top of the housing. If the antenna is an external type, or an antenna which is separate from the RX10 unit itself, care should be taken to ensure that certain installation criteria are met, as detailed below.

## RX10 Ten Zone Receiver Decoder

### ***Some major points to consider when installing equipment:***

- 1 Never install antennas near or adjacent to telephone, public address or data communication lines or overhead power cables.
- 2 Avoid, where ever possible, running antenna coax alongside other cables and avoid kinks and coils. Pre-terminated cable should not be altered.
- 3 Avoid mounting the receiver in the immediate vicinity of telephone exchanges or computer equipment.
- 4 Always use **50 ohm** coaxial cable between the antenna and the receiver. If cable runs exceed 5 metres, always use low loss 50 ohm cable such as RG213 or UR67 to a maximum of 15 metres.

**Coaxial cable intended for TV, Satellite or CCTV installations is normally 75 OHM and therefore totally unsuitable for any receiver installation manufactured by Scope.**

- 5 Also remember that the performance of the system will be affected by the type of material the unit is mounted on and its surroundings.

The following is a list of materials that this receiver will be adversely affected by if mounted on or if mounted in close proximity to:

- a) Foil back plasterboard
- b) Metal mesh or wire reinforced glass
- c) Metal sheeting, large mirrors or suspended ceilings
- d) Lift shafts

All of the above can reflect radio waves and thereby reduce the capability of the receiver to perform its desired functions.

- 6 The circuit boards within this equipment may be harmed by Electrostatic Discharge (ESD). Installers should ensure that both themselves and the system's chassis are grounded before beginning any installation, and should ensure that adequate anti-static procedures are adhered to at all times.


Fit the required switch cables to the appropriate relays. These are labelled Zone 1 to Zone 10 and Common (the Common relay operates when any zone is triggered). Terminals are available on each relay for Normally Open, Normally closed and Common.

Finally, connect the blue latching power connector to a 12V dc @ 0.7A power supply, observing the correct polarity, as shown in diagram 1.

To program and configure the unit, the 9 way D connector must be connected to a COM port on a PC using a standard 9 way serial cable (see Section 3, Programming Utility). This port can also be used to connect the unit to a serial printer or PC for data logging purposes, or to a Scope transmitter for repeater application.

# RX10 Ten Zone Receiver Decoder

Diagram 1

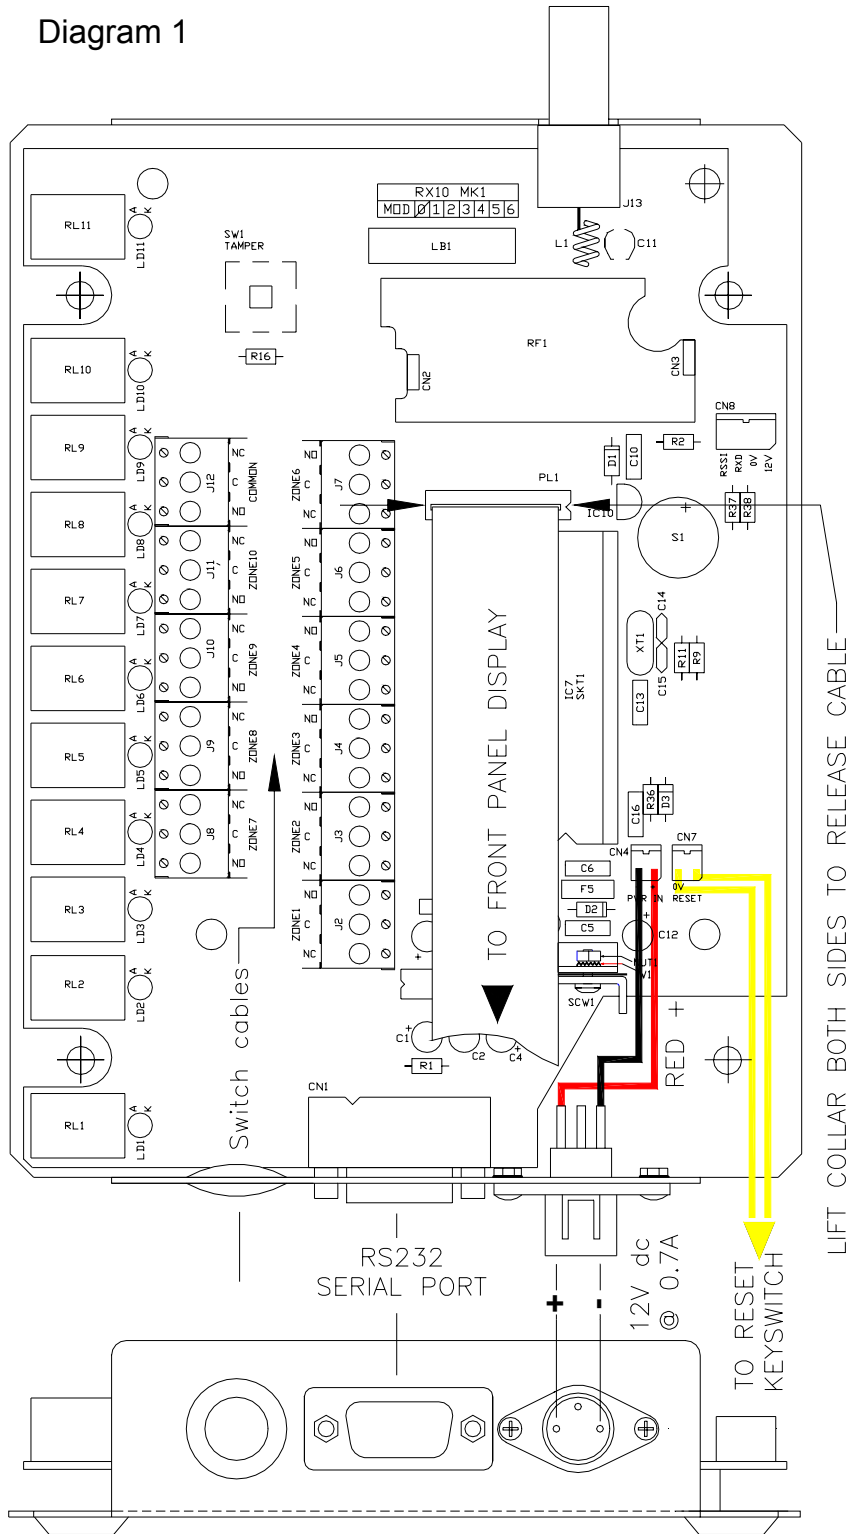

**Note! When re-fitting the front panel ribbon cable, ensure that the connector collar is raised and check that the cable is square to the connector. Ensure that the cable runs straight in the direction shown. Gently insert the cable tail as far as it will go, then push down equally on both sides of the connector collar.**

## RX10 Ten Zone Receiver Decoder

### Section 2: System Operation

The RX10 can be used to remotely switch up to 10 different circuits. This can be achieved by independently programming each zone with simple Close and Open latching commands. Zones can also be programmed for momentary operation, and if required, a single command can be used to toggle the state of each zone. A Reset function returns all zones to their initial state. This can be activated either over the air (by transmitting the programmed command) or by operation of the front panel keyswitch. A Common relay will latch when any zone is active. This can also be programmed to operate an internal sounder. The relay can be used for connection to an external sounder or light, providing a remote indication of system activity.

Both the configuration and uses of the RX10 are limited only by the user's imagination, so here we will provide just a few examples of how it's functionality can be utilised.

**Example 1:** you want to use Zone 1 to switch on a light when you transmit a command. You then want to switch the light off by transmitting a different command. To do this, connect your switch wires to the N/O and Common terminals of Zone 1. In the RX10 Pro Configuration utility, click on the Chan 1 tab. In the "Close" section, enable the tick box then enter the chosen RIC (or range of RIC's) for switching the light on. In the "Open" section, enable the tick box and enter your chosen RIC (or range of RIC's) for switching the light off (for a fuller explanation of programming the RX10, see Section 3).

When you transmit the "Close" RIC stored in Chan 1, the relay contacts will close, completing the circuit. The Zone 1 LED on the main board and on the front panel will light. The Common relay will also operate and the Common LED on the main board and front panel will also light. When you transmit the "Open" RIC stored for Zone 1, the relay contacts will open, breaking the circuit. The Zone 1 LED's will extinguish, the Common relay contacts will open and the Common LED's will extinguish.

**Example 2:** you want to use a single command on Zone 3 to switch a motor both On and Off for a 10 second period. To do this, connect your switch wires as in Example 1 if you require the motor to be in the Off state when the RX10 is initially powered up or reset. If you require it to be ON in this state, connect the wires to the N/C and Common terminals. In the RX10 Pro Configuration utility, click on the Zone 3 tab, then set the "Tmax" value to 10 (seconds). Now enter your command RIC (or range of RIC's) in the "Toggle" section and enable the tick box.

When you transmit the stored "Toggle" RIC, the motor will run for 10 seconds, then stop. Transmit again to run the motor for a further 10 seconds. If you transmit the RIC whilst the motor is running (i.e. during the set time period of 10 seconds), it will stop. Transmit again to run the motor for a further 10 second period.

**Example 3:** you have a "supervised" system where the transmitter sends out test calls at timed intervals. If the receiver fails to receive any test calls, you want to signal this by opening a pair of contacts. To do this, in the RX10 Pro Configuration utility choose a zone (Chan) and set the Tmax value to a period greater than your transmitter's test call period. Enable the "Close" function and enter your test call RIC. Wire the signal cables to the N/O and Common terminals of the selected Zone.



## RX10 Ten Zone Receiver Decoder

Note that the relay contacts will be open until the first test call is received, when they will close for the set time. Because the test call interval is shorter than the set time, the timer is reset with every successfully received call, so the relay contacts remain closed until a call is missed, when they will open until a call is successfully received.


Because both N/O and N/C terminals are available for each relay, this can cause confusion when deciding on whether to select the “Close” and “Open” functions. To avoid confusion, the “Close” function for each relay can be best described as “when the relay is energised”, and the “Open” function as “when the relay is de-energised”.

For example, if the N/C terminal configuration is used, when the “Close” command RIC is transmitted, the relay will energise and the contacts will go open. After this, if the “Open” command RIC is sent, the relay will de-energise and the contacts will close. Similarly, if the N/O terminal configuration is used, when the “Close” command RIC is transmitted, the relay will energise and the contacts will close. After this, if the “Open” command RIC is sent, the relay will de-energise and the contacts will open.

## RX10 Ten Zone Receiver Decoder

### Section 3: Programming Utility

#### a) Comm Port Configuration

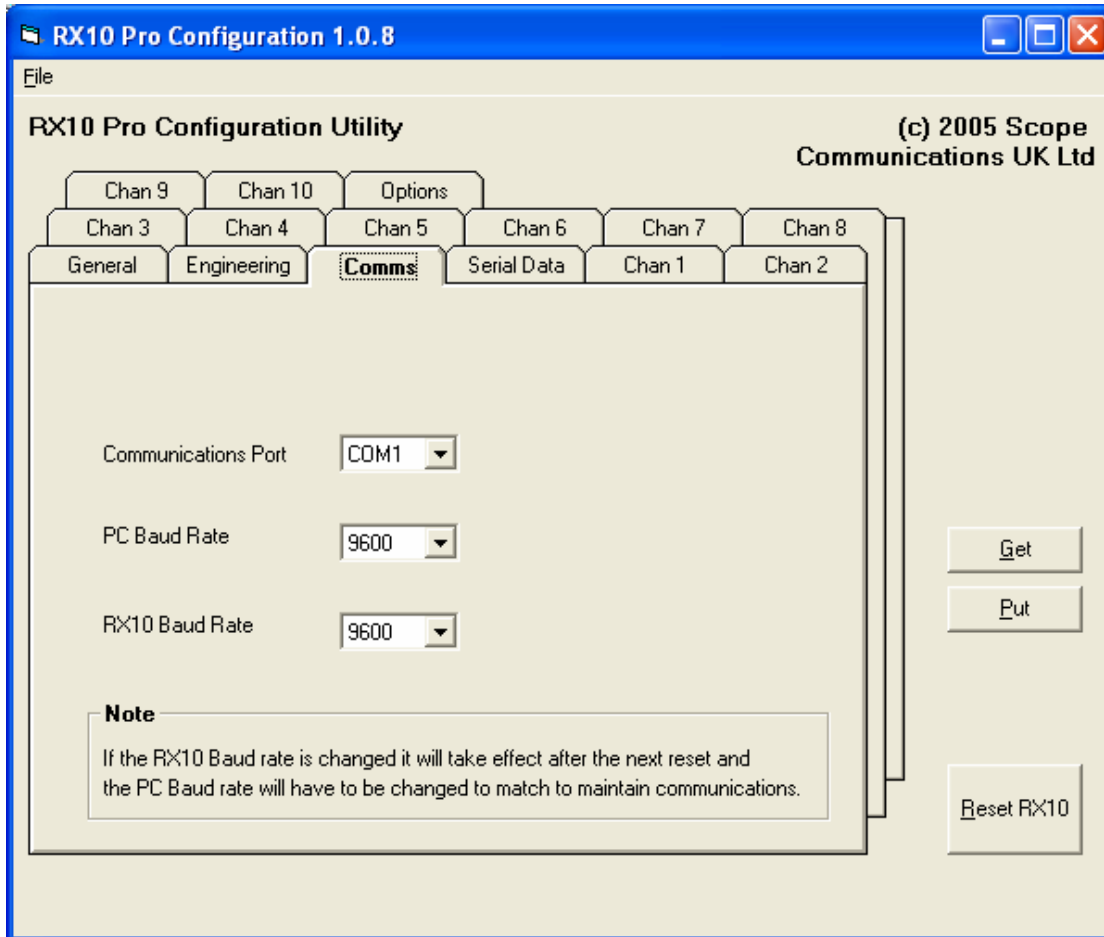

Install the software provided on a PC running Windows XP.


Prior to programming the RX10, enter the Com port and the comms baud rate which you are using on your PC to program the RX10.

Fit a standard 9 pin RS232 serial cable between your PC Com port and the RX10 serial port.

To check the set baud rate of the RX10, select "GET" to read the stored data. The unit is now ready to accept programming data.

## RX10 Ten Zone Receiver Decoder

### b) General Set Up

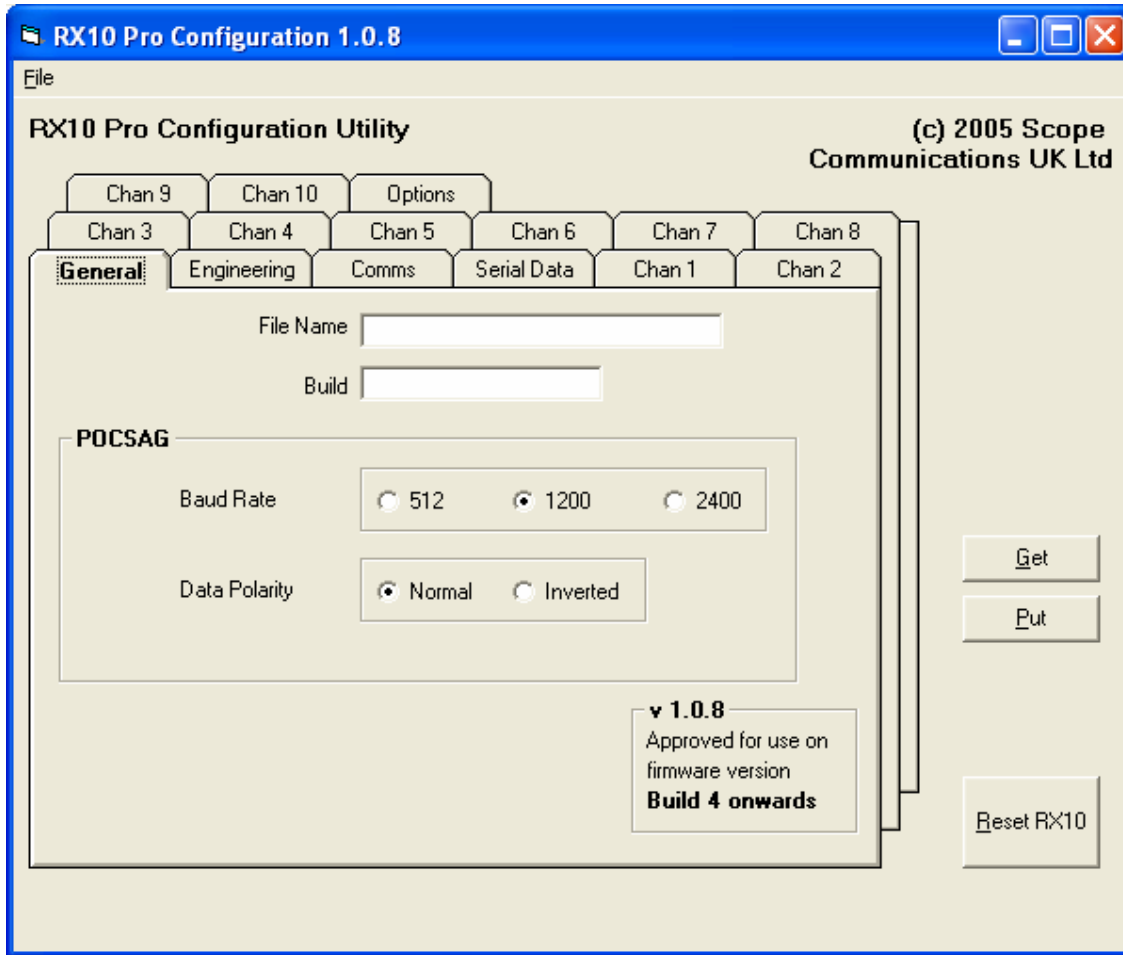


“File Name” and “Build” are read only fields. Data will appear in the boxes after a file is saved or opened.

The baud rate and data polarity must be chosen to match the settings of the transmitter used with the system.

## RX10 Ten Zone Receiver Decoder

### c) Options

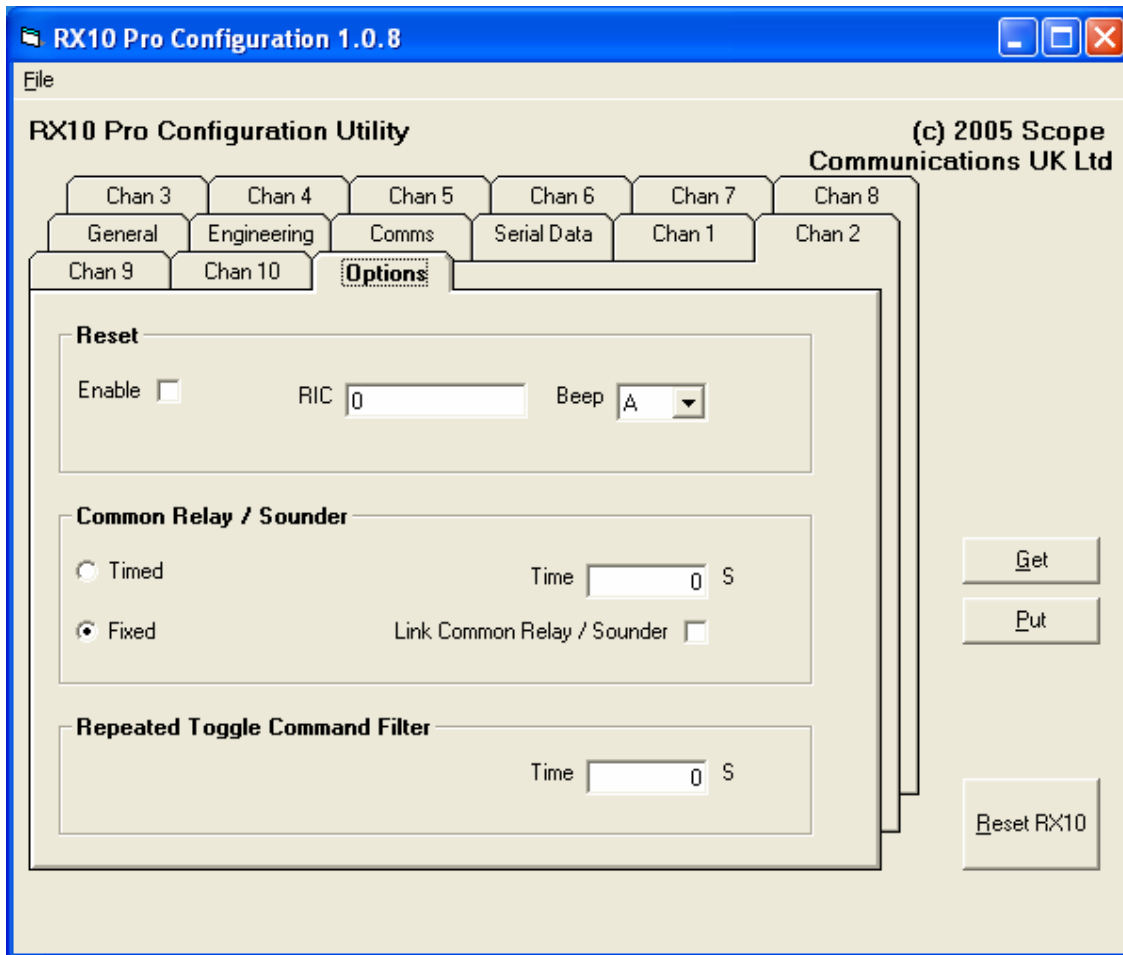

#### i) Reset

A specific RIC + beep type can be used to reset the RX10 over the air. The Enable tick box must be checked.

#### ii) Common Relay/Sounder

When any relay zone is activated, the common relay will be triggered. This can be programmed to stay latched by checking the “Fixed” option, or it can be programmed for momentary activation by checking the “Timed” option and entering the duration required (maximum is 255 seconds).


The sounder can be programmed to activate when the common relay is triggered by checking the “Link Common Relay/Sounder” box.

#### iii) Repeated Toggle Command Filter

Where the transmitter is programmed to send repeat calls for added integrity, it may be required to filter out these repeats if the “Toggle” function is being used (otherwise the relay will change state every time a repeat call is received). Enter the required time in the box provided (1-255 seconds). Note that this is not necessary where only the “Close” or “Open” functions are being used, as these will ignore repeats of the same RIC.

## RX10 Ten Zone Receiver Decoder

### d) Relay Configuration

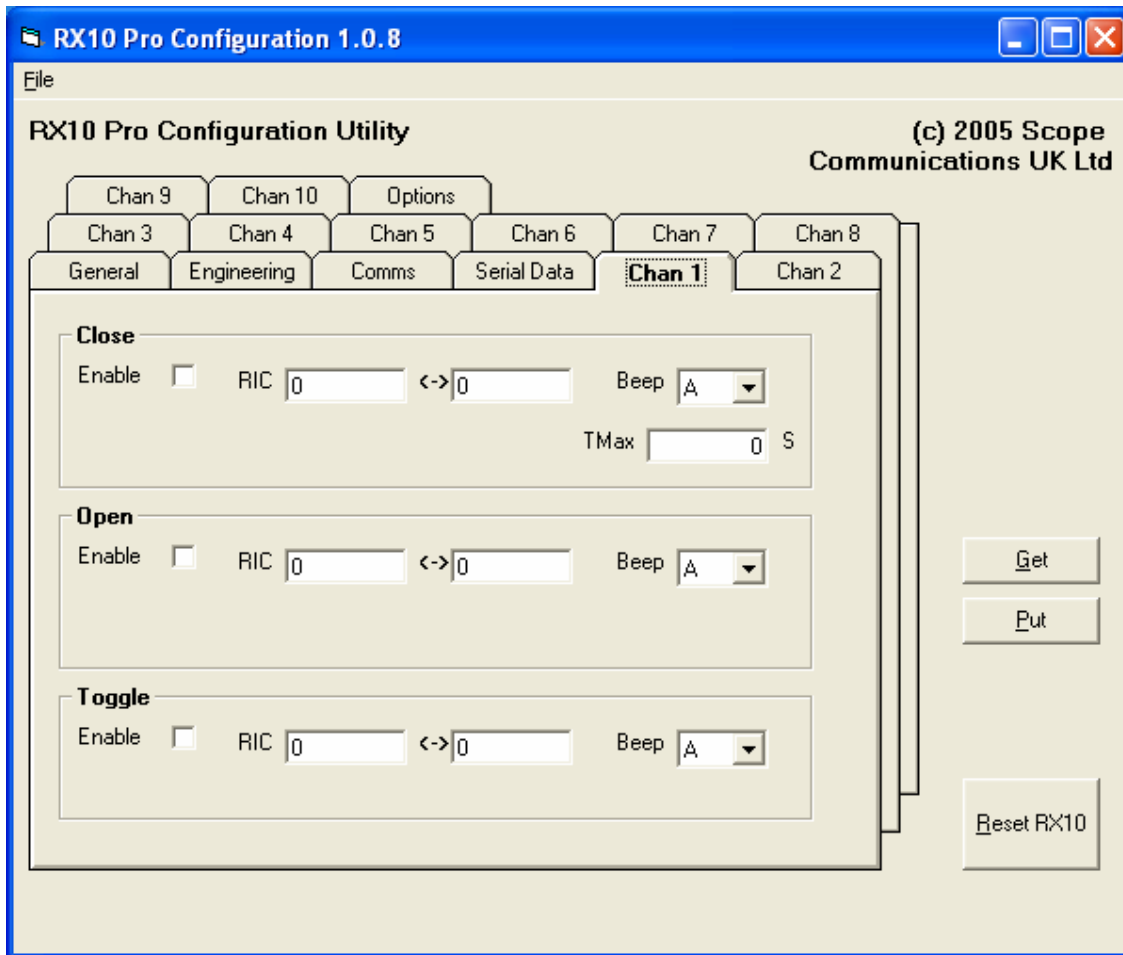

Each relay can be controlled using a range of RIC's to close, open or toggle the state of the relay.


As previously explained, "Close" means "energise the relay", "Open" means "de-energise the relay". "Toggle" means change the state of the relay each time the command RIC is received.

For latched (continuous) activation, the "TMax" box must be set to "0". For "Close" and "Open" functions, repeat receipts of the same activation RIC's will be ignored, unless a timed activation state has been set, as detailed below.

Where a timed state is required, this can be set between 1 and 255 seconds, after which the relay will revert to its previous state. As explained above in Example 3, if the same activation RIC is received during the timed period, the counter will be reset, thereby extending the period by the set time.

## RX10 Ten Zone Receiver Decoder

### e) Serial Data Output

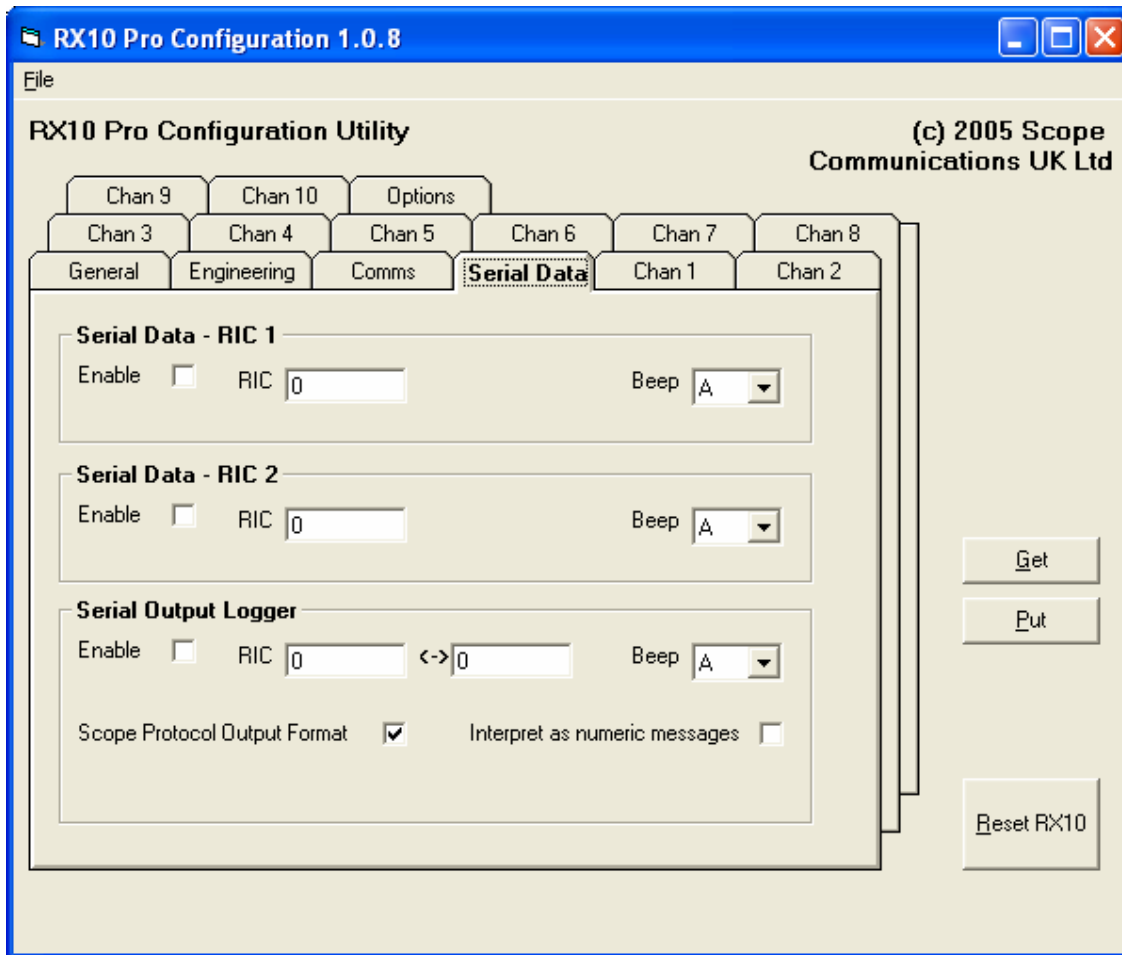

Where it is required to send message data for onward transmission or for logging purposes, the serial port can be enabled. The RX10 can be programmed to accept either two individual RIC's or a range of RIC's. Note: the RX10 does not provide time/date stamping, although this function could be facilitated using suitable software on a PC, or by using a POS style printer with an onboard real time clock.

#### i) Serial Data – RIC 1 and RIC 2

Where individual RIC's are selected, a specific beep type (A,B,C,D) must also be entered. When the chosen RIC + beep type + message is transmitted, the message will be passed to the serial port.

#### ii) Serial Output Logger

A range of RIC's can be entered, together with either a specific beep type or "All", where any beep type is valid. If the serial port is being used to pass data to a Scope transmitter (a repeater application), the tick box "Scope Protocol Output Format" should be checked. This will output the Scope control codes + RIC in front of the message. Where numeric messages are sent for onward transmission, the tick box "Interpret as numeric messages" must be checked.

## RX10 Ten Zone Receiver Decoder

### Section 4: Specification

Power Input:	12V to 13.8V dc max @ 0.7A
Power Consumption Standby (relays off, no serial port)	28mA
Standby (relays off, serial port connected)	38mA
Active serial decoder	63mA
Active all relays + sounder	648mA
Signal Format	POCSAG FSK NRZ (Normal or Inverted)
Frequency (fixed crystal)	In the range 440 –470MHz
Frequency Stability	+/- 10ppm
Channel Spacing	25KHz
Frequency Deviation	+/- 4.5KHz
Over Air Baud Rate (fixed programmable)	512/1200/2400 bps
Sensitivity	Maximum
512bps	6 $\mu$ V/m
1200bps	7.5 $\mu$ V/m
2400bps	8.5 $\mu$ V/m
Selectivity	>52dB
Image Rejection	>52dB
Spurious Rejection	>60dB
Intermodulation	>52dB
Relay Contact max rating	0.5A @ 125V ac, 1A @ 60V dc
Serial Port	RS232
Serial Configuration	N, 8, 1
Serial Baud Rate (fixed programmable)	1200 to 115200

E & OE. Scope's policy is one of continuous development and specifications are subject to change without notice