

## MANUAL PROGRAMMING INSTRUCTIONS XL2000 PAGER NUMERIC TOP READ

### Programming Functions:

Addresses (4)

Frequency (450 – 458 Mhz)

Baud Rate(512, 1200 and 2400)



1. Remove battery from pager.
2. Insert battery while holding down button [2].
3. When password appears, [0000] default password, press button [3].
4. The Frequency will appear, to change frequency press button [2], to move from one digit to another press button [1]. When frequency is correct press button [3]. The first cap code will appear.
5. Use button [1] to move from digit to digit. Use button [2] to change digit. Use button [3] to move to the next cap code.
6. Baud Rate -512, 1200, 2400. To change baud rate press button [2].
7. Press button [3] when done.
8. pager will beep and show **PASS**.