

# MANUAL PROGRAMMING INSTRUCTIONS

## 929 PAGER 2/4 LINE ZOOM

### Programming Functions:

Addresses (6)

Frequency (450 – 458 Mhz)

Baud Rate(512, 1200 and 2400)

Password

Contrast



1. Remove battery from pager.
2. Insert battery while holding down button [1].
3. When password appears, [0000] default password, press button [3].
4. The Frequency will appear, to change frequency press button [1], to move from one digit to another press button [2]. When frequency is correct press button [3]. The first cap code will appear.
5. Use button [2] to move from digit to digit. Use button [1] to change digit. Use button [3] to move to the next cap code.
6. Baud Rate -512, 1200, 2400. To change baud rate press button [2].
7. Press button [3] when done.
8. pager will beep and show **PASS**.

### **Special Features:**

1. Display page directly on screen when received.
2. Back Light on when page received.
3. Delete Page with one (1) button.
4. Turn Pager off with one (1) button.

### **Receiving a Page**

1. When a message is receive it will appear directly on the pager and the back light Will light.

### **Delete Page with one button (read button)**

1. Page displayed when received.
2. After reading the message, Press the **RD** button for 2 seconds, the word **DELETE?** will appear. Release button and Press the **RD** button again and the message will be deleted.

### **Turn Off Pager with one button (read button)**

1. When all messages are deleted, press and hold the RD button for 2 seconds.
2. The words **PAGER OFF?** will appear. Press the RD button again and the pager will turn off.